 
 
 
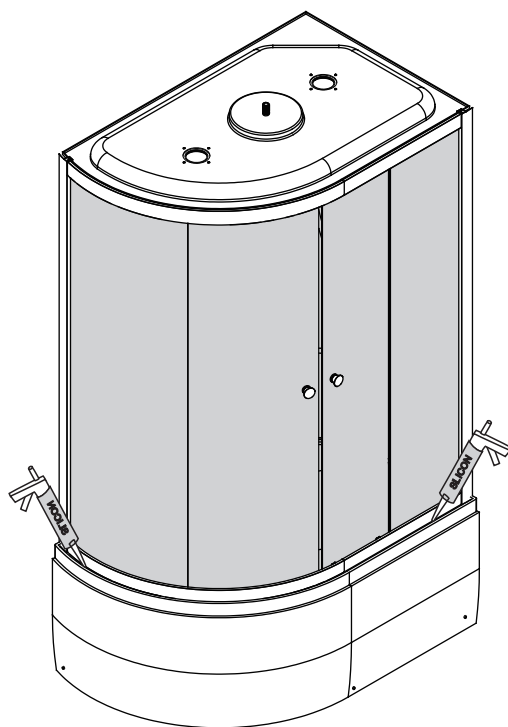 
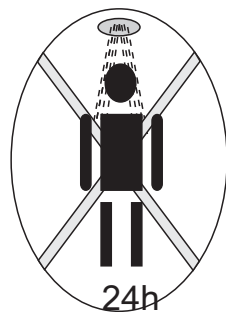 
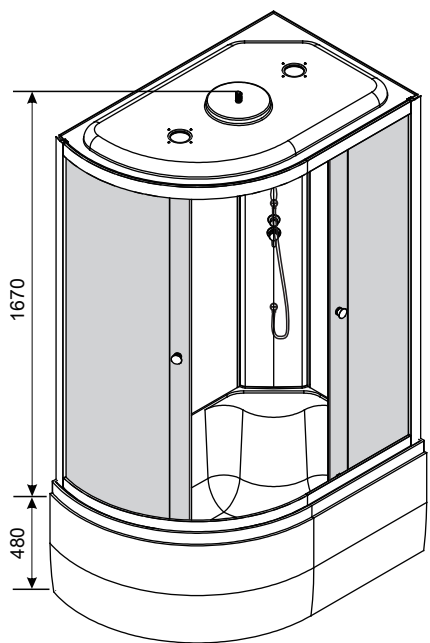 
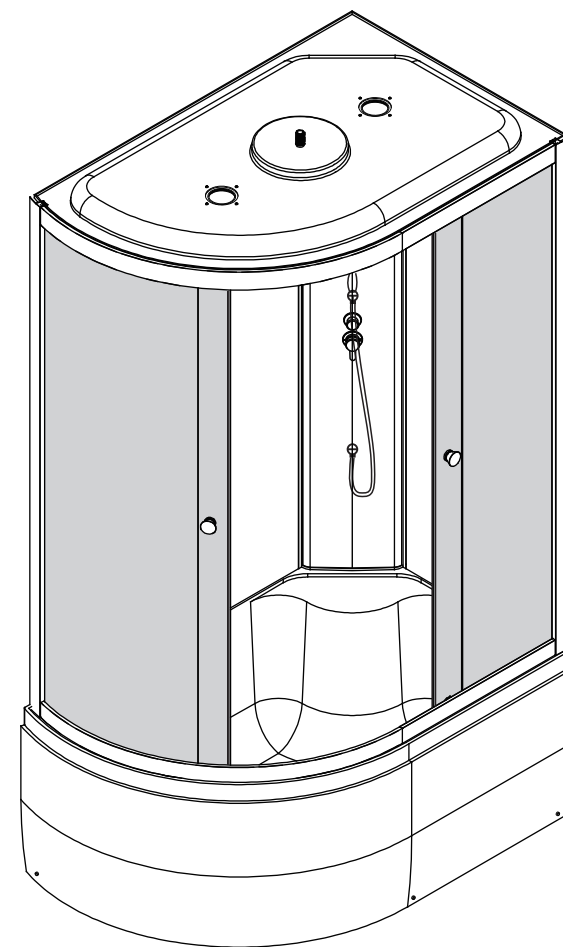 



Для моделей EC/EB/ET120(L/R)
Для моделей EC/EB/ET121(L/R)

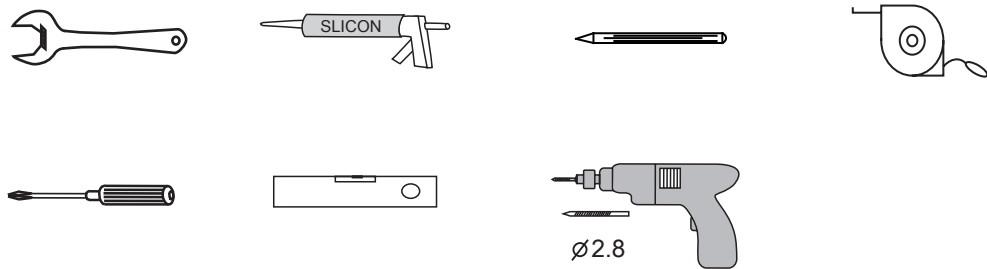

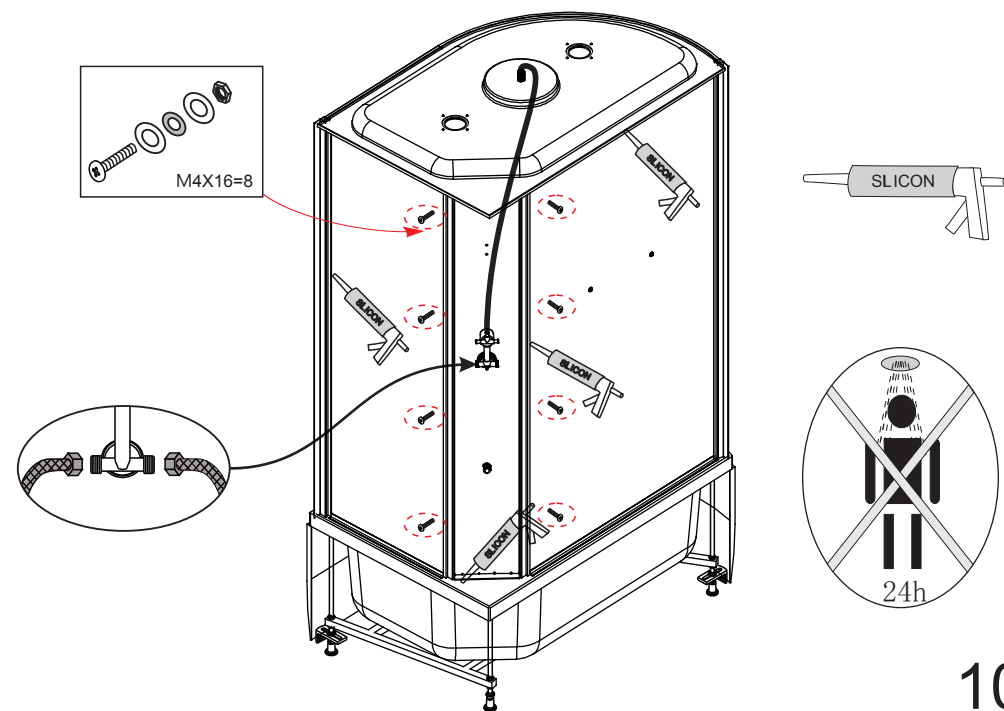


A1 X1	A2 X1	A3 X1	A4 X1	A5 X4
A6 X1	A7 X1	A8 X1	A9 X8	A10 X1 X4
A11 X2	A12 X2	A13 X1	A14 X2	A15 X1
A16 X1	A17 X1		A19 X1	A20 X1
A21 X1			 ST4X40=8 ST4X14=8 ST4X12=16 ST4X10=4 M4X25=10 M4X16=8	

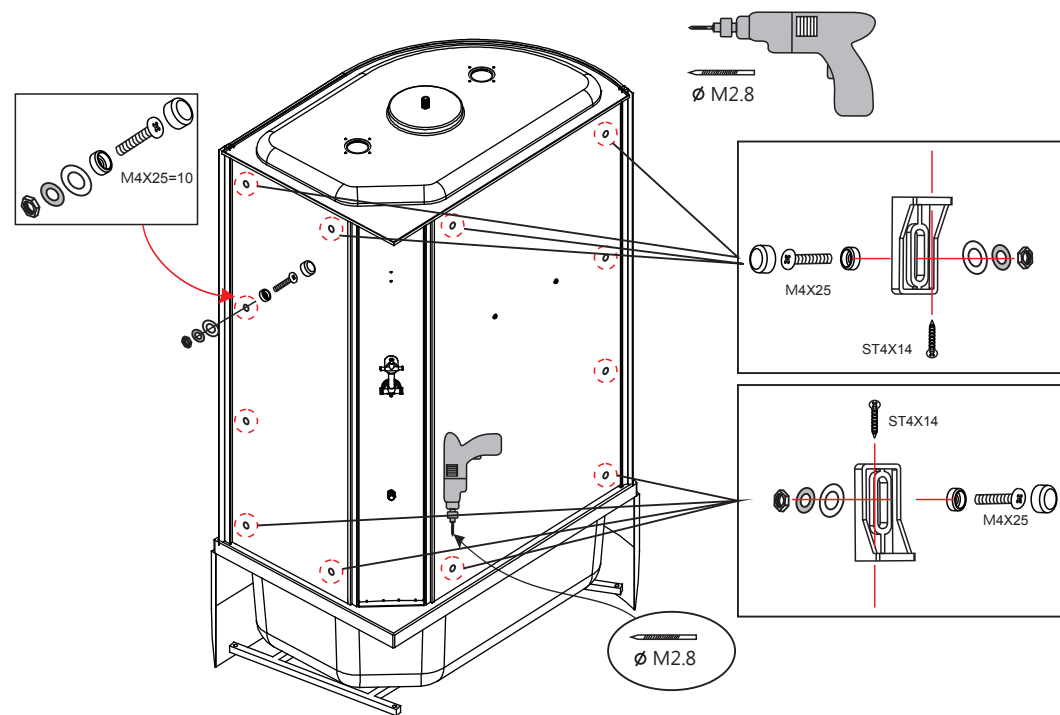


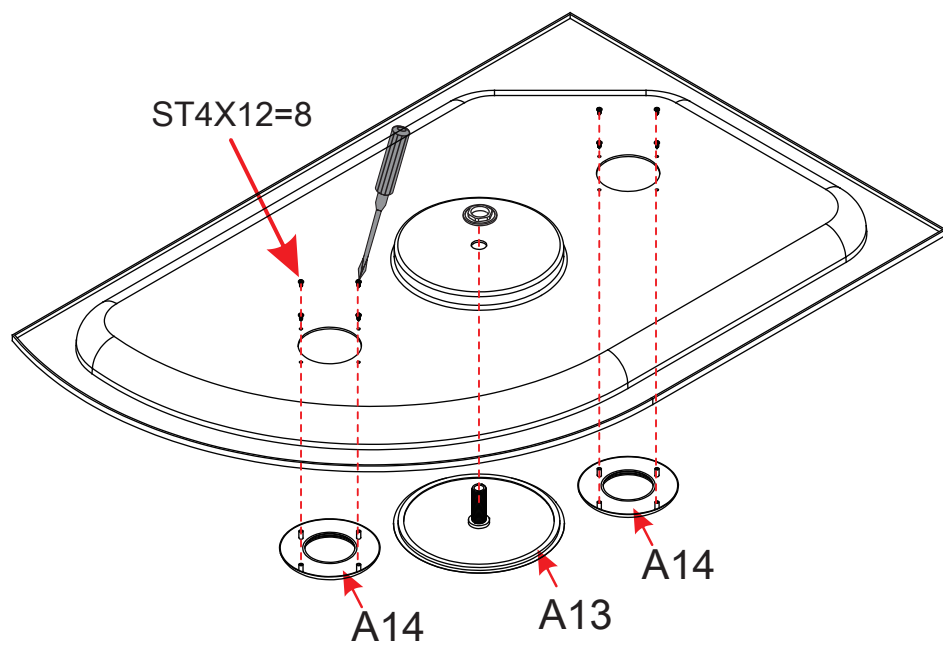 


A

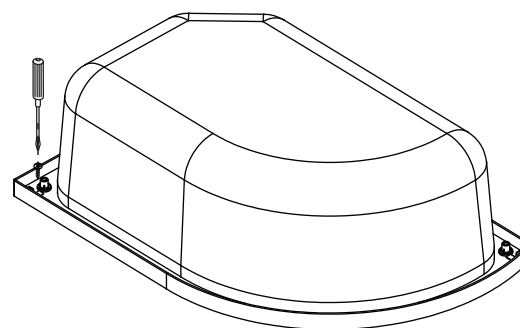 


B

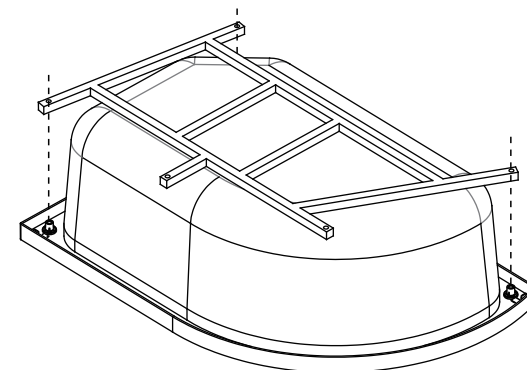 


C

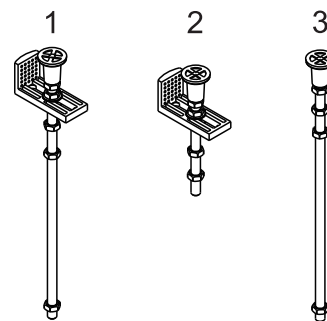 

D

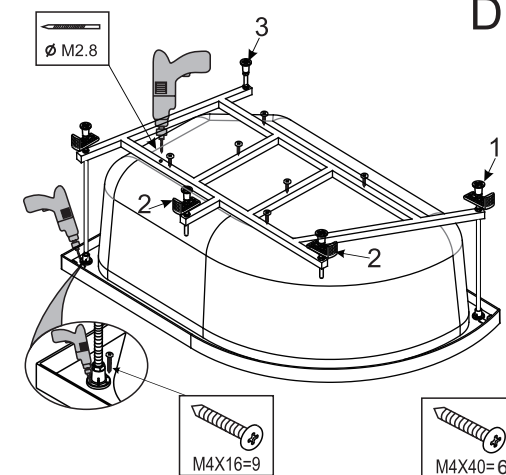 

E

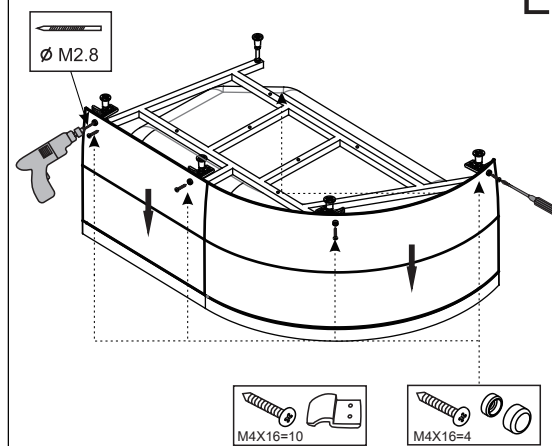 

F

